


-Alpha 105-



Fundamentplan

Zum Einbetonieren:

Typbreite	A	B	C	D	F
2000	1881	2152	61	1976	4252
2500	2381	2652	61	2476	5252
3000	2881	3152	61	2976	6252
3500	3381	3652	61	3476	7252
4000	3881	4152	61	3976	8252
4500	4381	4652	61	4476	9252
5000	4881	5152	61	4976	10252
5500	5381	5652	61	5476	11252
6000	5881	6152	61	5976	12252

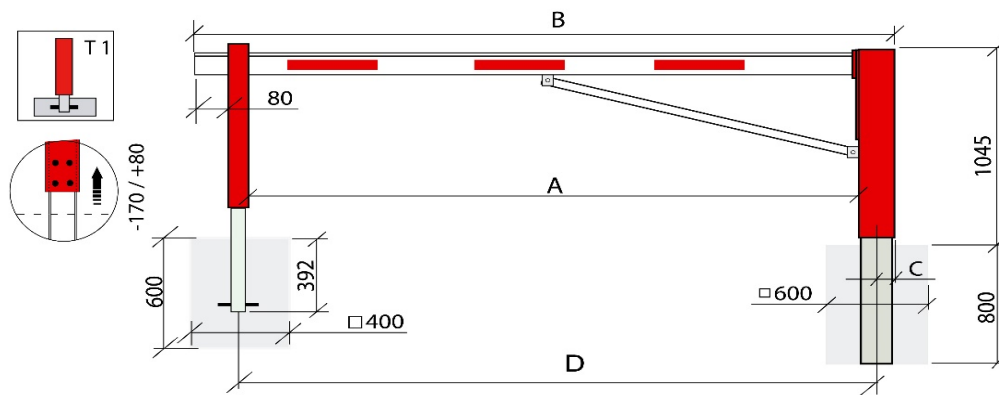

WEST/06MZ_1

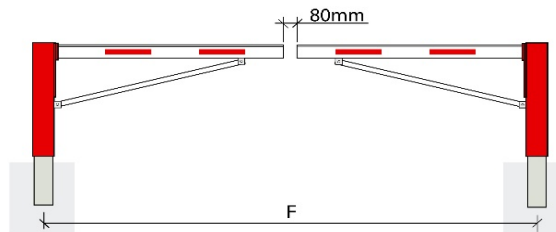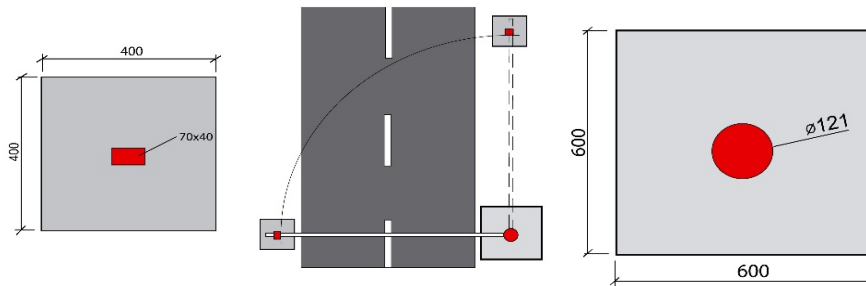

-Alpha 105-

Fundamentplan

Zum Aufschrauben:

Typbreite	A	B	C	D	F
2000	1751	2216	125	1976	4252
2500	2251	2716	125	2476	5252
3000	2751	3216	125	2976	6252
3500	3251	3716	125	3476	7252
4000	3751	4216	125	3976	8252
4500	4251	4716	125	4476	9252
5000	4751	5216	125	4976	10252
5500	5251	5716	125	5476	11252
6000	5751	6216	125	5976	12252

